


Piccolo™ Essential Oil Diffuser INSTRUCTIONS

PARTS

- 1 Light Button
- 2 Mist Button
- 3 Mist Outlet
- 4 Top Cover
- 5 Main Body
- 6 Water Tank
- 7 Max Fill Line
- 8 Air Outlet
- 9 Ceramic Disc
- 10 DC Socket
- 11 USB Cord

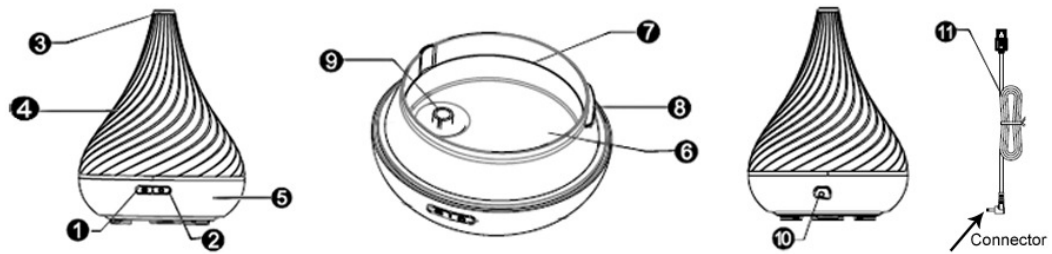

FEATURES

Ultrasonic vibrations transform your essential oil and water into healthy, fragrant mist.

1. Water Capacity: 100 mL (3.38 fl oz)
2. Suggested Room Size: Up to 100 sq ft
3. Continuous Operation: Up to 8 hours
4. Intermittent Operation: Up to 16 hours at 15-second intervals
5. Light Mode: Rotating, freeze color, candlelight, or OFF
6. Automatic safety shut-off
7. Power: USB Cord

CARE & MAINTENANCE

Do not fill water into the diffuser from the Mist Outlet. Only use the power cord that is supplied with the unit. Always remove the power cord before cleaning. Essential oil should not come in contact with the exterior surface of the unit.

TO CLEAN:

* SpaRoom® KLENZOR™ tablets may be used to renew diffuser to like-new condition.

Remove Top Cover. Empty the water from the side of the tank. Do not empty water near the Air Outlet.

The Ceramic Disc should not come in contact with any hard or sharp objects.

To remove possible buildup, gently use a cotton swab dipped in white vinegar to wipe out the inside.

Dry with a soft cloth to avoid mineral buildup. Do not use strong cleaning agents.

INSTRUCTIONS FOR USE

Place diffuser on a flat, water-resistant surface.

1. Remove the Top Cover from the Main Body.
2. Fill the Water Tank up to Max Fill Line with tap water. Do not overfill or mist output may be low. Add a few drops of essential oil (not included) directly into the Water Tank.
3. Replace the Top Cover.
4. Plug the Connector of the USB Cord into the DC Socket in the back of the diffuser. Then plug into a USB port.

5. Button Functions:

Left Side – Light:

- 1st Push = Rotating color
- 2nd Push = Freeze color
- 3rd Push = Candlelight
- 4th Push = Turns light OFF

Right Side – Mist:

- 1st Push = Continuous mist with rotating color lights
- 2nd Push = Intermittent mist (light will blink 2x) with rotating color lights
- 3rd Push = Turns the mist and light OFF

NOTES:

- The unit will turn off when water level becomes too low.
- Disconnect the USB Cord when not in use.

